

examinair® KIT INCLUDES:



**examinair®
Box**

Do not discard this box! It will be used to return the pump, cassettes and forms.




**examinair®
Pump**

Do not store or use the examinair® in temperatures below 32°F or above 110°F.




**Allergenco-D™ Air
Sampling Cassettes**

One cassette will be used for an outdoor sample and the other three will be used for indoor samples.

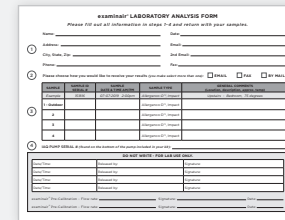

**Laboratory
Analysis Form**


Please fill out completely. It is used to identify where samples were taken and to track analysis of samples.

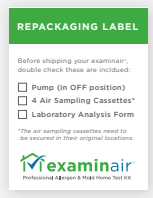

**Repackaging
Label**

Used to seal your box after sampling is complete.

1. OUTDOOR SAMPLE PROCEDURE

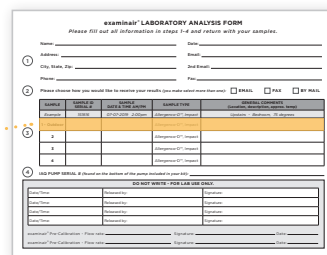

- A. Find an outdoor sampling area as described in “Identifying Sampling Locations” on the inside of this brochure.
- B. Remove the Allergenco-D™ outdoor air sampling cassette from the box.
- C. On the cassette you will find a serial number. Write that number on the line labeled “1 Outdoor” on the laboratory analysis form. Fill in the date and time and general comments on that line.

- D. Remove the examinair® pump from the box.
- E. Close the lid on the box and place on a stable, clean and dry surface. (Optimal height is 3-5 feet above ground or floor).
- F. Place the pump on top of the box on the “Testing Platform” area.



- G. Remove the white sticker covering the **ROUND** port on the air sampling cassette. (Save this sticker to use in Step L.)
- H. Place cassette into the black round housing on top of the pump.
- I. Remove other white sticker covering the larger **OVAL** port on cassette. (Save this sticker to use in Step L.)

- J. Turn the pump on by pressing “ON”. Start the pump by pressing the “5 MIN” key, you should hear a hum when the pump is running. This sound indicates your sampling has begun.
- K. The pump will shut off automatically and the “COMPLETE” light will turn on after 5 minutes of sampling.
- L. Remove cassette from the pump and place both stickers back over the round and oval cassette port openings. Place back in box.

2. INDOOR SAMPLES

- Find an indoor sampling area as described in “Identifying Sampling Locations” on the inside of this brochure. Make sure to use a different Allergenco-D™ air sampling cassette for each sample.
- For indoor samples #2, #3, #4, repeat steps C - L from above.

3. LABORATORY ANALYSIS FORM & REPACKAGING INFORMATION

After completing all four samples, review the laboratory analysis form to ensure that you have completed all information correctly. Place the pump, cassettes and forms inside the examinair® box. Make sure that the cassettes are secured and in their original locations. Adhere the return label on the top of the examinair® box. Use the repackaging label to seal the box. (A normal piece of shipping tape can be used if this label is lost or damaged). Take the sealed package to the designated shipping provider on your return label.

4. RESULTS

Detailed results will be returned via e-mail, fax and/or US Mail depending on the service(s) you have requested on the laboratory analysis form.

QUESTIONS?

Our customer service team is here to help! Call us at (866) 743-8563.

examinair® is a product of:



Home reports generated by:

